


HDG WebControl

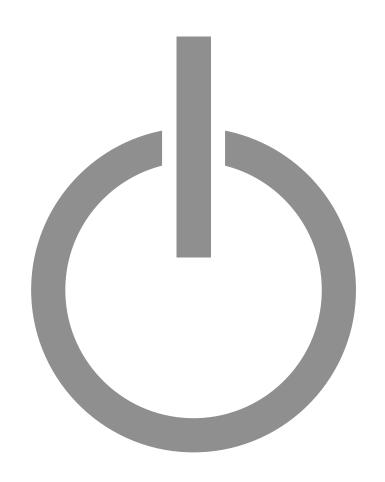

Installation



Caution!

The Internet connection of the HDG Control Touch XL must be implemented by the customer via router or network!

NETWORK CONNECTION HDG CONTROL



Figure 2/1 - Network connection display HDG Control

1. Connect the network cable (1) to the rear of the control unit HDG Control Touch XL.

NETWORK CONNECTION HDG CONTROL PRO



Figure 2/2 - Network connection Display HDG Control Pro

- 1. Connect the network cable (1) to the WAN interface on the rear side of the control unit HDG Control Pro.
- 2. Open the website https://next.hdg-bavaria.com.
- ✓ You are on the main page.

SIGNUP

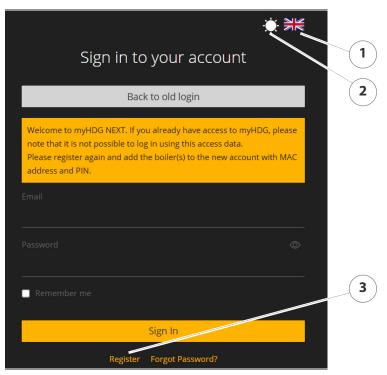


Figure 2/3 - Signup

- 3. If necessary, press the language symbol (1) and select the desired language.
- 4. If necessary, choose between dark and light display mode (2).
- 5. Press the Register button (3).
- ✓ You are now on the registration page.

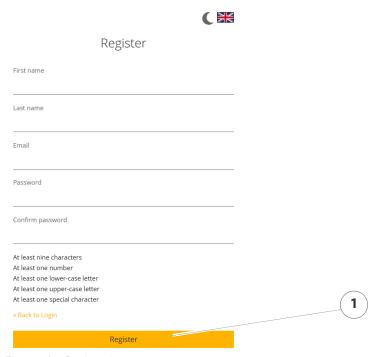


Figure 2/4 - Registration page

- 6. Enter the details for your user account.
- 7. Press the button *Register* (1).
- ✓ You have successfully registered.
- ✓ You will receive an e-mail with a link to activate your account.
- 8. Click on the activation link in the e-mail.
- ✓ You are on the login page.



Sign in to your account



Figure 2/5 - Sign-in-page

- 9. Enter your E-mail adress and password.
- 10.Press the button Sign-in (1).
- ✓ You are on the MyHDG-page.

Login



Figure 2/6 - MyHDG-page

The following functions are available:

- Main menu:
 - MyHDG start page
 - Edit account
 - Logout
- Add heating system



You can create a group in the desired area or combine selected boilers or stand-alone controllers in a group.

Share

You can share your system with other accounts, use cases are e.g. within the family or property management. As long as the customer has access to the system with their myHDG PIN, all persons with whom the system has been shared also have access.

The customer can manage and remove the people with whom the system has been shared. Not to be confused with the expert area, which can only be used for service purposes via a separate PIN.

Procedure:

- 1. Activate the share function.
- 2. Select an heating system to share. A pop-up appears with a message and a code.
- 3. Copy the code and send it by e-mail to another myHDG user.
- 4. End sharing again.

The myHDG user who has received the code can add the system in their "Heating systems shared with me" area using the code. The code is only valid once for 24 hours, but can be regenerated at any time.

If a system has been successfully shared, a yellow share symbol appears for the owner; the people with whom the system has been shared can be managed here.

Deleate



~

Show / Hide

ADD BOILER



You are now registered as a user and have successfully logged in. The next step is to connect your user account to your heating system.



11. Press the button + (1).

✓ You are on the boiler activation side.

MAC-ADRESS

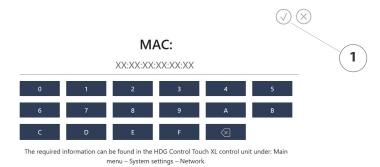


Figure 2/7 - Activate boiler



The MAC address is the unique identification for your HDG Web-Control. You will find it in the control unit HDG Control Touch XL, "Main menu" -> "System settings" -> "Network" -> Par 01-55 MAC-Adresse or alternatively on the back of the control unit.

- 12. Make sure that the HDG Control Touch XL control unit is online.
- 13.Enter the MAC-Address.
- 14. Confirm your entry with the button *Confirm* (1).

PIN



In addition to the MAC address, a PIN is required for access to the HDG WebControl after software version 1.54. You can change the individual PIN in the HDG Control Touch XL control unit at "Main menu" -> "System settings" -> "Network" -> Par 01-56 myHDG PIN or Par 01-57 myHDG Experten-PIN. The PIN must be unequal to 0000.



Abbildung 2/8 - PIN eingeben

- 15.Enter the PIN.
- 16. Confirm your entry with the button Confirm (1).

- ✓ The connection between your boiler and the HDG WebControl is established.
- ✓ You are back on the boiler selection page.



Figure 2/9 - Choose boiler

- 17. Press onto the boiler (1).
- ✓ You are in the HDG WebControl.



Alternatively, in the case of internal networks, the IP address of the HDG WebControl can be entered directly into the browser's address bar.

The IP-Adress can be found on the control unit HDG Control Touch XL, "Main menu" -> "System settings" -> "Network" -> Par 01-51 IP-Adress.

FAVORITES



By pressing the symbol heating systems or groups can be marked as favorites. These are then moved to the front of the overview.

Set Email notification



Figure 2/10 - Main menu

1. Press in the header line on *Main menu* (1).

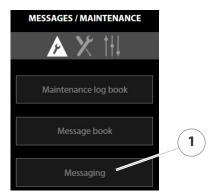


Figure 2/11 - Messaging

2. Press the button Messaging (1).

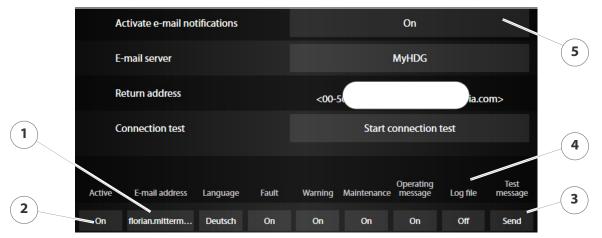


Figure 2/12 - Set Email-notifications

- 3. Set Activate e-mail notfication on On (5).
- 4. Enter the E-mail address (1).
- 5. Set *Active* on *On* (2).
- 6. Set the desired notifications (4).
- 7. Press on *Test message send* (3), to ensure that the settings and connection are in order.
- ✓ The email notification is set.

Setting up the E-Mail-Server



Tipp!

If the sending of e-mail notifications does not work, it must be ensured that our required e-mail server "postausgang.idowa.net" is included in the list of secure e-mail servers for the router used.

If it is not possible to set up e-mail transmission, please contact your provider!

HDG Bavaria GmbH

Siemensstraße 22 D-84323 Massing Tel. +49(0)8724/897-0 info@hdg-bavaria.com www.hdg-bavaria.com

Art.Nr. 9980001121 - V 05 - en - 02/2025